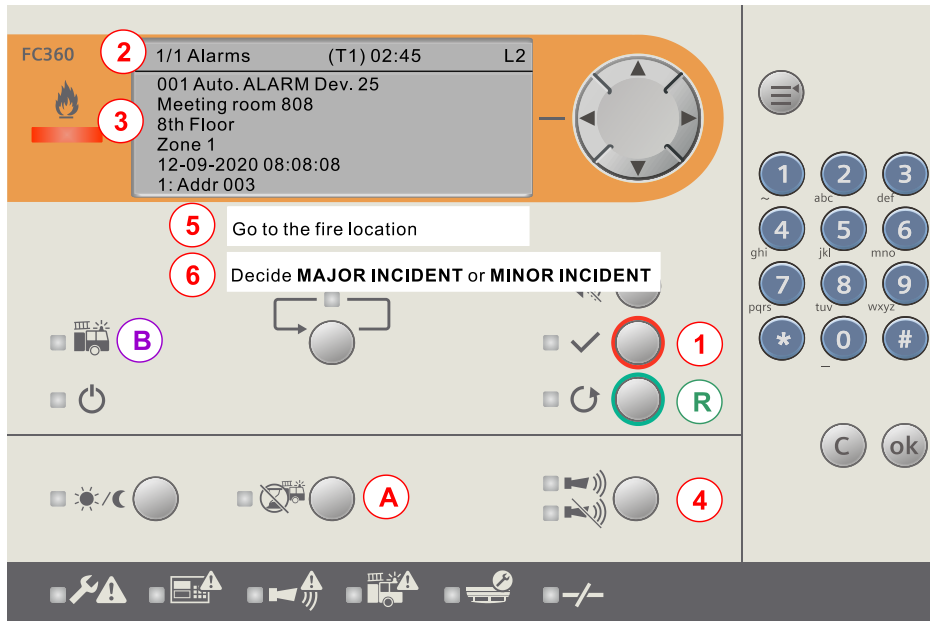


## ALARM Procedure

with Alarm Verification Concept (AVC) – suggested possible procedure – subject to local requirements



### Action / Condition

### Consequence / Status

<b>1.</b> Press  on the PMI (Person Machine Interface) before allowed reaction time (T1) runs out (password required).	<ul style="list-style-type: none"> <li>→ Buzzer is turned off. Alarm is acknowledged.</li> <li>→ Countdown T2 for alarm cause investigation starts.</li> </ul>
<b>2.</b> Check the time displayed on the headline of the display.	→ Remaining time is shown as countdown before Fire Brigade call.
<b>3.</b> Check the fire location on the display.	
<b>4.</b> (Optional) Press  on the PMI (password required).	→ Deactivates acoustic alarm devices. (Reactivation is possible by pressing the button again)
<b>5.</b> Go to the fire location.	→ Information on the cause of ALARM
<b>6.</b> <b>Decide: MAJOR INCIDENT or minor incident.</b>	→ If required, initiate suitable emergency measures.
<b>MAJOR INCIDENT:</b>	
<b>A</b> Press  <alarm delay off> or activate the nearest manual call point.	→ The remote transmission for fire alarm is activated immediately if connection to the fire brigade is installed.
<b>B</b> Possible LED indications ():	
<input type="checkbox"/> The fire brigade was called automatically. <input type="checkbox"/> Call the fire brigade.	<ul style="list-style-type: none"> <li>→ Fire brigade must be called by phone!</li> <li>– No automatic transmission to fire brigade</li> <li>– <b>Dial the following no.:</b></li> </ul>
<b>Minor incident:</b>	
<b>R</b> Press  to reset the panel (password required).	→ Fire detection system is in normal condition unless another event occurs. It may be necessary to ventilate the room before resetting is possible. Elements that cannot be reset can be switched off temporarily.

## Switching off zone (Access level 2 or above)

The following example represents a possible operation sequence:




### WARNING

**System parts that have been switched off make it impossible to acquire and process alarms or faults!**

Fire may spread unhindered.


- Deploy staff to monitor the deactivated area.
- You must switch deactivated parts of the 'Site' back on as soon as possible.

Step	Result														
1. Press the button  to open the main menu.	<table border="1"><tr><td>Main menu</td><td>L2</td></tr><tr><td>1 - System status</td><td>▶</td></tr><tr><td>2 - Operation</td><td></td></tr><tr><td>3 - Event memory</td><td></td></tr><tr><td>4 - Login</td><td></td></tr><tr><td>5 - Lamp test</td><td></td></tr><tr><td>7 - Logout</td><td></td></tr></table>	Main menu	L2	1 - System status	▶	2 - Operation		3 - Event memory		4 - Login		5 - Lamp test		7 - Logout	
Main menu	L2														
1 - System status	▶														
2 - Operation															
3 - Event memory															
4 - Login															
5 - Lamp test															
7 - Logout															
2. Press <▼> to select 'Operation' and confirm with <▶>.	<table border="1"><tr><td>Operation</td><td>L2</td></tr><tr><td>1 - Isolation</td><td>▶</td></tr><tr><td>2 - Test</td><td></td></tr></table>	Operation	L2	1 - Isolation	▶	2 - Test									
Operation	L2														
1 - Isolation	▶														
2 - Test															
3. Confirm 'Isolation' with <▶>.	<table border="1"><tr><td>Isolation</td><td>L2</td></tr><tr><td>1 - Detection</td><td>▶</td></tr><tr><td>2 - Sounders</td><td></td></tr><tr><td>3 - RT outputs</td><td></td></tr><tr><td>4 - Fire control</td><td></td></tr><tr><td>5 - Control dev.</td><td></td></tr><tr><td>6 - Door holder device</td><td></td></tr></table>	Isolation	L2	1 - Detection	▶	2 - Sounders		3 - RT outputs		4 - Fire control		5 - Control dev.		6 - Door holder device	
Isolation	L2														
1 - Detection	▶														
2 - Sounders															
3 - RT outputs															
4 - Fire control															
5 - Control dev.															
6 - Door holder device															
4. Confirm 'Detection' with <▶>.	<table border="1"><tr><td>Isolation - Detection</td><td>L2</td></tr><tr><td>1 - Zone</td><td>▶</td></tr><tr><td>2 - Device</td><td></td></tr></table>	Isolation - Detection	L2	1 - Zone	▶	2 - Device									
Isolation - Detection	L2														
1 - Zone	▶														
2 - Device															
5. Confirm 'Zone' with <▶>. A list of all zones is displayed.	<table border="1"><tr><td>Isolation - Zone</td><td>L2</td></tr><tr><td>01 Floor 3</td><td>(ON)▶</td></tr><tr><td>T1 Floor 3 (Tech.)</td><td>(ON)</td></tr></table>	Isolation - Zone	L2	01 Floor 3	(ON)▶	T1 Floor 3 (Tech.)	(ON)								
Isolation - Zone	L2														
01 Floor 3	(ON)▶														
T1 Floor 3 (Tech.)	(ON)														
6. Press <▼> to select a zone and confirm with <▶>. A confirmation dialog window is open.	<div style="border: 1px solid black; padding: 10px; text-align: center;"><p>Do you want to disable Zone?</p><p>Yes (OK) or No (C)</p></div>														
7. Press <ok> to confirm. The selected zone is disabled and the isolation LED is ON.	<table border="1"><tr><td>Isolation - Zone</td><td>L2</td></tr><tr><td>01 Floor 3</td><td>(OFF)▶</td></tr><tr><td>T1 Floor 3 (Tech.)</td><td>(ON)</td></tr></table>	Isolation - Zone	L2	01 Floor 3	(OFF)▶	T1 Floor 3 (Tech.)	(ON)								
Isolation - Zone	L2														
01 Floor 3	(OFF)▶														
T1 Floor 3 (Tech.)	(ON)														




## Switching on zone (Access level 2 or above)



- When there is no event with a higher priority, isolations (switched off) are directly indicated on the display. You may then directly proceed with Step 6 below.

Step	Result														
<p>1. Press the button  to open the main menu.</p>	<table border="1"> <tr><td>Main menu</td><td>L2</td></tr> <tr><td>1 - System status</td><td>▶</td></tr> <tr><td>2 - Operation</td><td></td></tr> <tr><td>3 - Event memory</td><td></td></tr> <tr><td>4 - Login</td><td></td></tr> <tr><td>5 - Lamp test</td><td></td></tr> <tr><td>7 - Logout</td><td></td></tr> </table>	Main menu	L2	1 - System status	▶	2 - Operation		3 - Event memory		4 - Login		5 - Lamp test		7 - Logout	
Main menu	L2														
1 - System status	▶														
2 - Operation															
3 - Event memory															
4 - Login															
5 - Lamp test															
7 - Logout															
<p>2. Press &lt;▼&gt; to select <b>'Operation'</b> and confirm with &lt;▶&gt;.</p>	<table border="1"> <tr><td>Operation</td><td>L2</td></tr> <tr><td>1 - Isolation</td><td>▶</td></tr> <tr><td>2 - Test</td><td></td></tr> </table>	Operation	L2	1 - Isolation	▶	2 - Test									
Operation	L2														
1 - Isolation	▶														
2 - Test															
<p>3. Confirm <b>'Isolation'</b> with &lt;▶&gt;.</p>	<table border="1"> <tr><td>Isolation</td><td>L2</td></tr> <tr><td>1 - Detection</td><td>▶</td></tr> <tr><td>2 - Sounders</td><td></td></tr> <tr><td>3 - RT outputs</td><td></td></tr> <tr><td>4 - Fire control</td><td></td></tr> <tr><td>5 - Control dev.</td><td></td></tr> <tr><td>6 - Door holder device</td><td></td></tr> </table>	Isolation	L2	1 - Detection	▶	2 - Sounders		3 - RT outputs		4 - Fire control		5 - Control dev.		6 - Door holder device	
Isolation	L2														
1 - Detection	▶														
2 - Sounders															
3 - RT outputs															
4 - Fire control															
5 - Control dev.															
6 - Door holder device															
<p>4. Confirm <b>'Detection'</b> with &lt;▶&gt;.</p>	<table border="1"> <tr><td>Isolation - Detection</td><td>L2</td></tr> <tr><td>1 - Zone</td><td>▶</td></tr> <tr><td>2 - Device</td><td></td></tr> </table>	Isolation - Detection	L2	1 - Zone	▶	2 - Device									
Isolation - Detection	L2														
1 - Zone	▶														
2 - Device															
<p>5. Confirm <b>'Zone'</b> with &lt;▶&gt;. A list of all zones is displayed.</p>	<table border="1"> <tr><td>Isolation - Zone</td><td>L2</td></tr> <tr><td>01 Floor 3</td><td>(OFF)▶</td></tr> <tr><td>T1 Floor 3 (Tech.)</td><td>(ON)</td></tr> </table>	Isolation - Zone	L2	01 Floor 3	(OFF)▶	T1 Floor 3 (Tech.)	(ON)								
Isolation - Zone	L2														
01 Floor 3	(OFF)▶														
T1 Floor 3 (Tech.)	(ON)														
<p>6. Press &lt;▼&gt; to select a zone and confirm with &lt;▶&gt;. A confirmation dialog window is open.</p>	<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>Do you want to enable Zone?</p> <p>Yes (OK) or No (C)</p> </div>														
<p>7. Press &lt;ok&gt; to confirm. The selected zone is enabled and the isolation LED is OFF.</p>	<table border="1"> <tr><td>Isolation - Zone</td><td>L2</td></tr> <tr><td>01 Floor 3</td><td>(ON)▶</td></tr> <tr><td>T1 Floor 3 (Tech.)</td><td>(ON)</td></tr> </table>	Isolation - Zone	L2	01 Floor 3	(ON)▶	T1 Floor 3 (Tech.)	(ON)								
Isolation - Zone	L2														
01 Floor 3	(ON)▶														
T1 Floor 3 (Tech.)	(ON)														

## Procedure in case of Fault

Step	Result
1. Press  on the PMI. ⇒	The buzzer on the panel is switched off.
2. Check message/fault location on the display. ⇒	Information on type and place of the fault.
3. Go to the fault location and remedy the cause of the fault. ⇒	When the fault has been eliminated, the system could be acknowledged. The maintenance personnel are called up if the fault dialer is installed.
4. Press  on the PMI. ⇒	If activated, the local alarm equipment is silenced.
5. Press  to reset the panel. ⇒	The panel is in normal condition unless another event occurs.

If you cannot eliminate a fault, please contact your service provider.

## Operation (short)

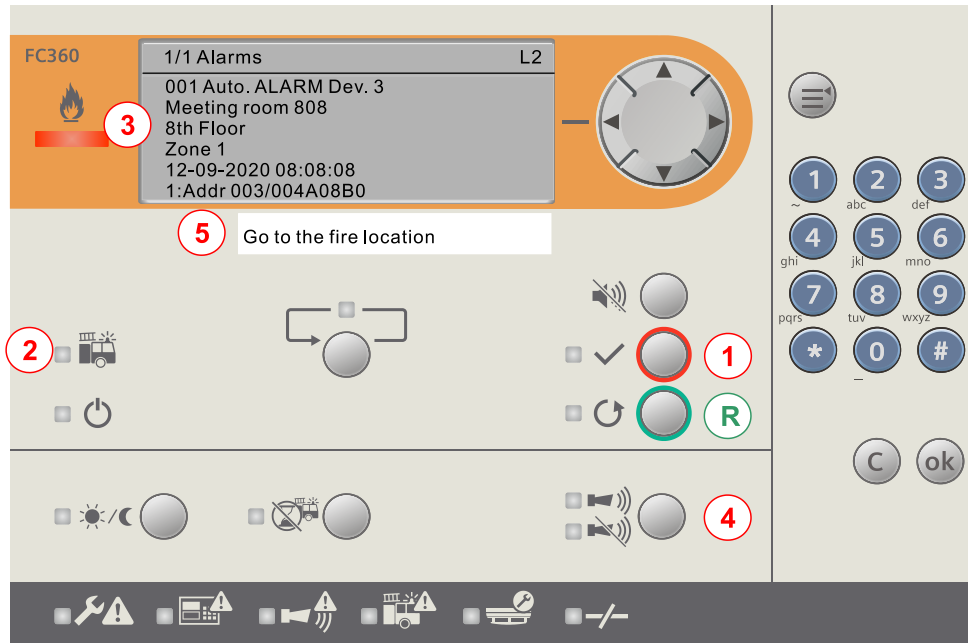
FC360 Fire control panel

ALARM-Procedure  
Switching off zone  
Switching on zone  
Procedure in case of Fault

Page 1  
Page 2  
Page 3  
Page 4

 



## ALARM Procedure

No Alarm Verification Concept (AVC) – suggested possible procedure – subject to local requirements



### Action / Condition

### Consequence / Status

<b>1.</b> Press  on the PMI (password required).	→ Buzzer is turned off. Alarm is acknowledged.
<b>2.</b> Possible LED indications (  ): <input type="checkbox"/> The fire brigade was called automatically. <input type="checkbox"/> Call the fire brigade.	→ Fire brigade must be called by phone! – No automatic transmission to fire brigade – <b>Dial the following no.:</b>
<b>3.</b> Check the fire location on the display.	
<b>4.</b> During the alarm, optionally press  on the PMI (password required).	→ Deactivates acoustic alarm devices. (Reactivation is possible by pressing the button again.)
<b>5.</b> Go to the fire location.	→ Information on the cause of ALARM; if required, initiate required emergency measures and damage limitation.
<b>R</b> Press  to reset the panel (password required).	→ Fire detection system is in normal condition unless another event occurs. It may be necessary to ventilate the room before resetting is possible. Elements that cannot be reset can be switched off temporarily.

## Switching off zone (Access level 2 or above)

The following example represents a possible operation sequence:




### WARNING

**System parts that have been switched off make it impossible to acquire and process alarms or faults!**

Fire may spread unhindered.


- Deploy staff to monitor the deactivated area.
- You must switch deactivated parts of the 'Site' back on as soon as possible.

Step	Result														
1. Press the button  to open the main menu.	<table border="1"> <tr><td>Main menu</td><td>L2</td></tr> <tr><td>1 - System status</td><td>▶</td></tr> <tr><td>2 - Operation</td><td></td></tr> <tr><td>3 - Event memory</td><td></td></tr> <tr><td>4 - Login</td><td></td></tr> <tr><td>5 - Lamp test</td><td></td></tr> <tr><td>7 - Logout</td><td></td></tr> </table>	Main menu	L2	1 - System status	▶	2 - Operation		3 - Event memory		4 - Login		5 - Lamp test		7 - Logout	
Main menu	L2														
1 - System status	▶														
2 - Operation															
3 - Event memory															
4 - Login															
5 - Lamp test															
7 - Logout															
2. Press <▼> to select 'Operation' and confirm with <▶>.	<table border="1"> <tr><td>Operation</td><td>L2</td></tr> <tr><td>1 - Isolation</td><td>▶</td></tr> <tr><td>2 - Test</td><td></td></tr> </table>	Operation	L2	1 - Isolation	▶	2 - Test									
Operation	L2														
1 - Isolation	▶														
2 - Test															
3. Confirm 'Isolation' with <▶>.	<table border="1"> <tr><td>Isolation</td><td>L2</td></tr> <tr><td>1 - Detection</td><td>▶</td></tr> <tr><td>2 - Sounders</td><td></td></tr> <tr><td>3 - RT outputs</td><td></td></tr> <tr><td>4 - Fire control</td><td></td></tr> <tr><td>5 - Control dev.</td><td></td></tr> <tr><td>6 - Door holder device</td><td></td></tr> </table>	Isolation	L2	1 - Detection	▶	2 - Sounders		3 - RT outputs		4 - Fire control		5 - Control dev.		6 - Door holder device	
Isolation	L2														
1 - Detection	▶														
2 - Sounders															
3 - RT outputs															
4 - Fire control															
5 - Control dev.															
6 - Door holder device															
4. Confirm 'Detection' with <▶>.	<table border="1"> <tr><td>Isolation - Detection</td><td>L2</td></tr> <tr><td>1 - Zone</td><td>▶</td></tr> <tr><td>2 - Device</td><td></td></tr> </table>	Isolation - Detection	L2	1 - Zone	▶	2 - Device									
Isolation - Detection	L2														
1 - Zone	▶														
2 - Device															
5. Confirm 'Zone' with <▶>. A list of all zones is displayed.	<table border="1"> <tr><td>Isolation - Zone</td><td>L2</td></tr> <tr><td>01 Floor 3</td><td>(ON)▶</td></tr> <tr><td>T1 Floor 3 (Tech.)</td><td>(ON)</td></tr> </table>	Isolation - Zone	L2	01 Floor 3	(ON)▶	T1 Floor 3 (Tech.)	(ON)								
Isolation - Zone	L2														
01 Floor 3	(ON)▶														
T1 Floor 3 (Tech.)	(ON)														
6. Press <▼> to select a zone and confirm with <▶>. A confirmation dialog window is open.	<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>Do you want to disable Zone?</p> <p>Yes (OK) or No (C)</p> </div>														
7. Press <ok> to confirm, the selected zone is disabled and the isolation LED is ON.	<table border="1"> <tr><td>Isolation - Zone</td><td>L2</td></tr> <tr><td>01 Floor 3</td><td>(OFF)▶</td></tr> <tr><td>T1 Floor 3 (Tech.)</td><td>(ON)</td></tr> </table>	Isolation - Zone	L2	01 Floor 3	(OFF)▶	T1 Floor 3 (Tech.)	(ON)								
Isolation - Zone	L2														
01 Floor 3	(OFF)▶														
T1 Floor 3 (Tech.)	(ON)														




## Switching on zone (Access level 2 or above)



- When there is no event with a higher priority, isolations (switched off) are directly indicated on the display. You may then directly proceed with Step 6 below.

Step	Result														
<p>1. Press the button  to open the main menu.</p>	<table border="1"> <tr><td>Main menu</td><td>L2</td></tr> <tr><td>1 - System status</td><td>▶</td></tr> <tr><td>2 - Operation</td><td></td></tr> <tr><td>3 - Event memory</td><td></td></tr> <tr><td>4 - Login</td><td></td></tr> <tr><td>5 - Lamp test</td><td></td></tr> <tr><td>7 - Logout</td><td></td></tr> </table>	Main menu	L2	1 - System status	▶	2 - Operation		3 - Event memory		4 - Login		5 - Lamp test		7 - Logout	
Main menu	L2														
1 - System status	▶														
2 - Operation															
3 - Event memory															
4 - Login															
5 - Lamp test															
7 - Logout															
<p>2. Press &lt;▼&gt; to select <b>'Operation'</b> and confirm with &lt;▶&gt;.</p>	<table border="1"> <tr><td>Operation</td><td>L2</td></tr> <tr><td>1 - Isolation</td><td>▶</td></tr> <tr><td>2 - Test</td><td></td></tr> </table>	Operation	L2	1 - Isolation	▶	2 - Test									
Operation	L2														
1 - Isolation	▶														
2 - Test															
<p>3. Confirm <b>'Isolation'</b> with &lt;▶&gt;.</p>	<table border="1"> <tr><td>Isolation</td><td>L2</td></tr> <tr><td>1 - Detection</td><td>▶</td></tr> <tr><td>2 - Sounders</td><td></td></tr> <tr><td>3 - RT outputs</td><td></td></tr> <tr><td>4 - Fire control</td><td></td></tr> <tr><td>5 - Control dev.</td><td></td></tr> <tr><td>6 - Door holder device</td><td></td></tr> </table>	Isolation	L2	1 - Detection	▶	2 - Sounders		3 - RT outputs		4 - Fire control		5 - Control dev.		6 - Door holder device	
Isolation	L2														
1 - Detection	▶														
2 - Sounders															
3 - RT outputs															
4 - Fire control															
5 - Control dev.															
6 - Door holder device															
<p>4. Confirm <b>'Detection'</b> with &lt;▶&gt;.</p>	<table border="1"> <tr><td>Isolation - Detection</td><td>L2</td></tr> <tr><td>1 - Zone</td><td>▶</td></tr> <tr><td>2 - Device</td><td></td></tr> </table>	Isolation - Detection	L2	1 - Zone	▶	2 - Device									
Isolation - Detection	L2														
1 - Zone	▶														
2 - Device															
<p>5. Confirm <b>'Zone'</b> with &lt;▶&gt;. A list of all zones is displayed.</p>	<table border="1"> <tr><td>Isolation - Zone</td><td>L2</td></tr> <tr><td>01 Floor 3</td><td>(OFF)▶</td></tr> <tr><td>T1 Floor 3 (Tech.)</td><td>(ON)</td></tr> </table>	Isolation - Zone	L2	01 Floor 3	(OFF)▶	T1 Floor 3 (Tech.)	(ON)								
Isolation - Zone	L2														
01 Floor 3	(OFF)▶														
T1 Floor 3 (Tech.)	(ON)														
<p>6. Press &lt;▼&gt; to select a zone and confirm with &lt;▶&gt;. A confirmation dialog window is open.</p>	<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>Do you want to enable Zone?</p> <p>Yes (OK) or No (C)</p> </div>														
<p>7. Press &lt;ok&gt; to confirm. The selected zone is enabled and the isolation LED is OFF.</p>	<table border="1"> <tr><td>Isolation - Zone</td><td>L2</td></tr> <tr><td>01 Floor 3</td><td>(ON)▶</td></tr> <tr><td>T1 Floor 3 (Tech.)</td><td>(ON)</td></tr> </table>	Isolation - Zone	L2	01 Floor 3	(ON)▶	T1 Floor 3 (Tech.)	(ON)								
Isolation - Zone	L2														
01 Floor 3	(ON)▶														
T1 Floor 3 (Tech.)	(ON)														

## Procedure in case of Fault

Step	Result
1. Press  on the PMI. ⇒	The buzzer on the panel is switched off.
2. Check message/fault location on the display. ⇒	Information on type and place of the fault.
3. Go to the fault location and remedy the cause of the fault. ⇒	When the fault has been eliminated, the system could be acknowledged. The maintenance personnel are called up if the fault dialer is installed.
4. Press  on the PMI. ⇒	If activated, the local alarm equipment is silenced.
5. Press  to reset the panel. ⇒	The panel is in normal condition unless another event occurs.

If you cannot eliminate a fault, please contact your service provider.