



2010-2-PCC-CF USB Dongle Installation Sheet

Description

The 2010-2-PCC-CF USB Dongle is required to unlock control features in Configuration Utility 3.6 (or later).

The dongle must be installed on the same PC as the Configuration Utility.

Installing the driver

Install the driver as described below. This procedure is required for first-time installations only.

Note: The Configuration Utility must first be installed on the host PC. The required driver is included with v3.2 (or later).

Installing the driver:

1. Connect the USB dongle to the host PC
2. Open the Device Manager
3. Click Other devices, and then right-click the PAK USB Device basic control device
4. Select Update Driver Software, and then click Browse my computer for driver software

The driver is typically located at:

C:\Program Files (x86)\UTC\[application folder]\PAK Driver

5. Select the driver, and then click Next

Follow the on-screen instructions to complete the driver installation

Specifications

Connector type	USB type A
Operating environment	
Operating temperature	-5 to +40 °C
Storage temperature	-20 to +50 °C
Relative humidity	10 to 95% (noncondensing)
Weight	14 g
Dimensions (W × H × D)	71 × 23 × 8.7 mm

Regulatory information

Conformity	
Manufacturer	Carrier Manufacturing Poland Spółka Z o.o., Ul. Kolejowa 24, 39-100 Ropczyce, Poland. Authorized EU manufacturing representative: Carrier Fire & Security B.V., Kelvinstraat 7, 6003 DH Weert, Netherlands.
	2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info .

Contact information

For contact information or to download the latest product documentation, visit firesecurityproducts.com.